



NAVIGATOR™ PUSH BUTTONS AND BOOTS REPLACEMENT INSTRUCTIONS

This procedure is for the replacement of the Push Button and Boots on all Style 9303, 9304 and 9305 Navigators.

Disassembly Instructions

1. Remove the four (4) screws attaching the Bezel to the Case.
2. Remove the three (3) screws attaching the Circuit Board to the Bezel.

Note: Most units have two stacked Circuit Boards with the exception of the Style 9303 Auxiliary Controller with a single board and the Style 9305 with two sets of stacked boards. The top board must first be removed from the bottom stacked Circuit Board. The bottom board can then be separated from the Bezel by removing a second set of screws.

3. Remove the screws holding the second board.
4. With the Bezel face down, unscrew the Hex Head Nut holding the defective Push Button Boot.
5. Push the Button down through the Bezel. Each Push Button has a contact pin. Be sure to locate this pin and note its position.
6. Replace the entire Push Button Assembly from the front side and reattach with the Hex Head Screw.

Note: The Kit includes a small stainless steel spacer. This item can be discarded.

7. Repeat the above steps to replace any additional Push Buttons and Boots.
8. Reverse the above steps for reassembly then fully test all functions.



PHONE: 330.264.5678 or 800.228.1161 | FAX: 330.264.2944 or 800.531.7335 | akronbrass.com

REVISED: 8/11

WARRANTY AND DISCLAIMER: We warrant Akron Brass products for a period of five (5) years after purchase against defects in materials or workmanship. Akron Brass will repair or replace product which fails to satisfy this warranty. Repair or replacement shall be at the discretion of Akron Brass. Products must be promptly returned to Akron Brass for warranty service.

We will not be responsible for: wear and tear; any improper installation, use, maintenance or storage; negligence of the owner or user; repair or modification after delivery; damage; failure to follow our instructions or recommendations; or anything else beyond our control. WE MAKE NO WARRANTIES, EXPRESS OR IMPLIED, OTHER THAN THOSE INCLUDED IN THIS WARRANTY STATEMENT, AND WE DISCLAIM ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Further, we will not be responsible for any consequential, incidental or indirect damages (including, but not limited to, any loss of profits) from any cause whatsoever. No person has authority to change this warranty.

© Akron Brass Company, 2011 All rights reserved. No portion of this can be reproduced without the express written consent of Akron Brass Company.