





HALE TBP TRANSFER VALVE AIR CONNECTIONS

OPERATORS PANEL INSTALLATION CUTOUTS

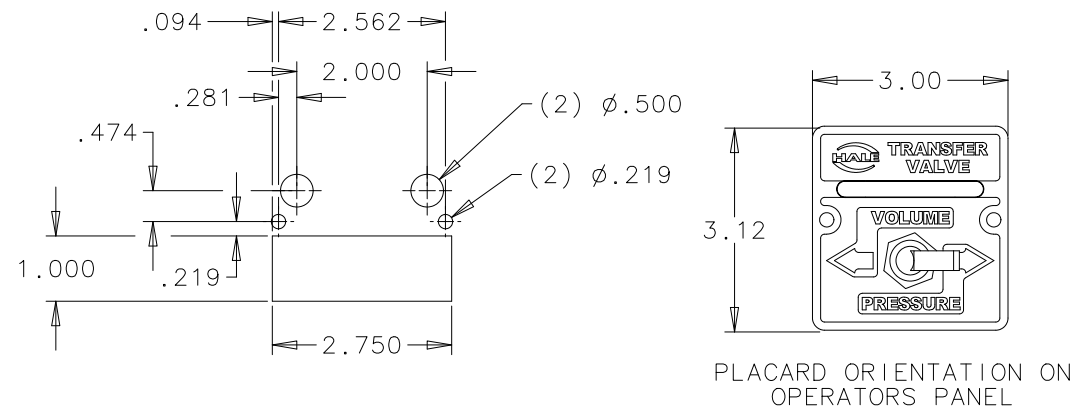

* MAINTENANCE INSTRUCTIONS *

CHECK DEBRIS IN ORIFICE 082-6110-01-0 BY REMOVING IT FROM THE POPPET VALVE AND TRUCK AIR SUPPLY. DO NOT REMOVE WHEN SYSTEM IS PRESSURIZED.

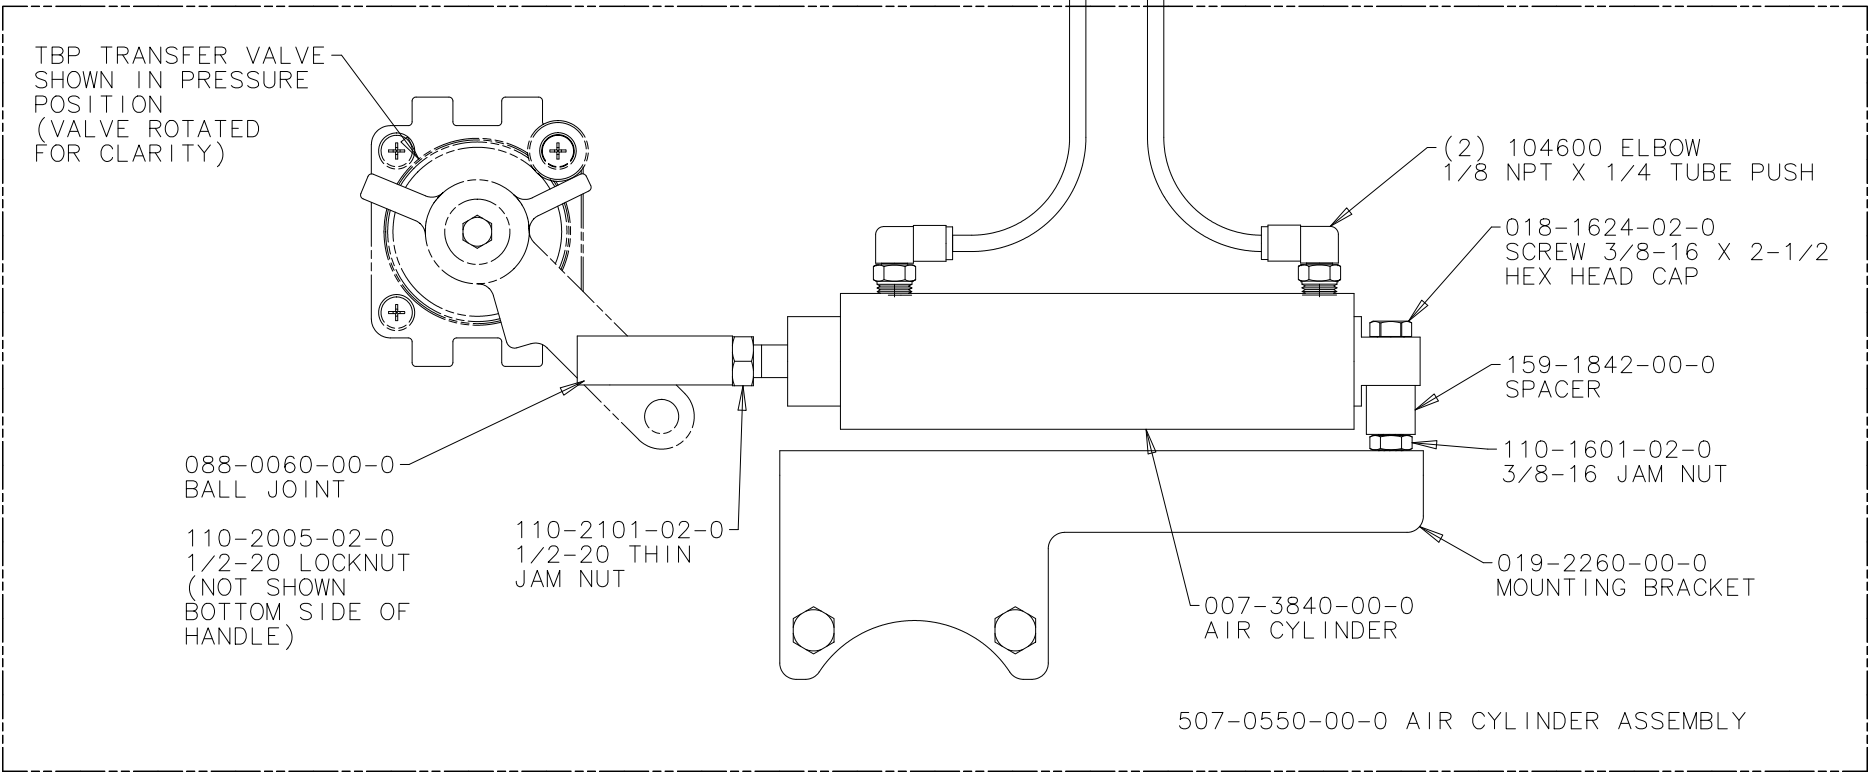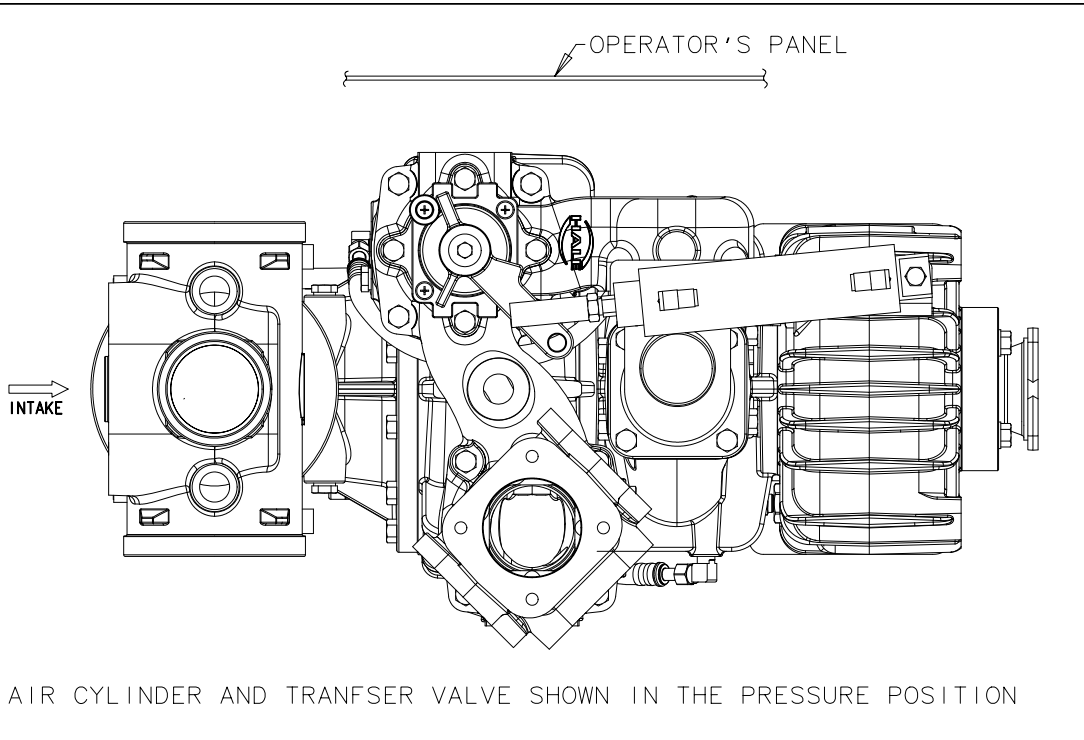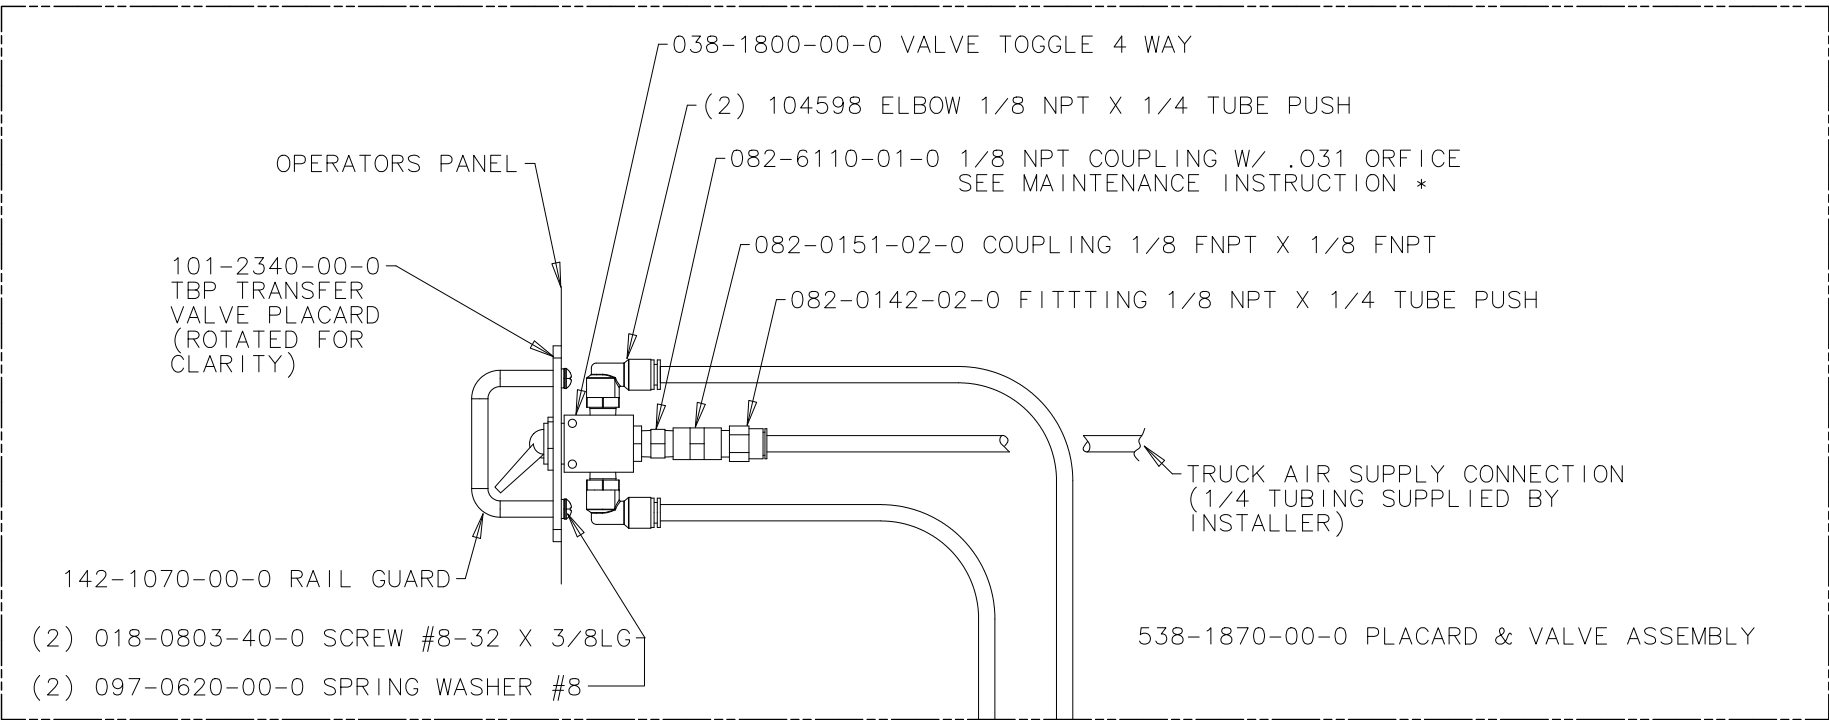

PL1185AA

546-3260-00-0 TBP TRANSFER VALVE AIR OPERATED SYSTEM
(INCLUDES: 538-1870-00-0 PLACARD & VALVE ASSEMBLY
AND 507-0550-00-0 AIR CYLINDER ASSEMBLY)

ECO NO	REV	CHANGED FROM	BY	DATE	APVD
907	A	RELEASED FOR PRODUCTION	DJK	09-04-09	PRW

COPYRIGHT ©

NOT TO BE REPRODUCED OR USED TO

MAKE OTHER DRAWINGS OR MACHINERY.

DRAWN

DJK

CHECKED

PRW

DATE

07/31/09

SIZE

E

SCALE

NONE

HALE

HALE PRODUCTS, INC.

A Unit of IDEX Corporation

Conshohocken, PA 19428 USA