



ASSAULT™ FLOW KIT*

<input type="checkbox"/> 4822-0014	750 LPM @ 5 bar	<input type="checkbox"/> 4822-0017	950 LPM @ 700 kPa
<input type="checkbox"/> 4822-0015	1140 LPM @ 5 bar	<input type="checkbox"/> 4827-0025	950 LPM @ 700 kPa
<input type="checkbox"/> 4822-0010	750 LPM @ 7 bar	<input type="checkbox"/> 4822-0018	1140 LPM @ 700 kPa
<input type="checkbox"/> 4822-0011	950 LPM @ 7 bar	<input type="checkbox"/> 4822-0019	1325 LPM @ 700 kPa
<input type="checkbox"/> 4822-0012	1140 LPM @ 7 bar	<input type="checkbox"/> 4822-0020	750 LPM @ 500 kPa
<input type="checkbox"/> 4822-0013	1325 LPM @ 500 kPa	<input type="checkbox"/> 4822-0021	950 LPM @ 500 kPa
<input type="checkbox"/> 4822-0016	750 LPM @ 700 kPa	<input type="checkbox"/> 4822-0022	1140 LPM @ 500 kPa
<input type="checkbox"/> 4827-0039	950 LPM @ 345 kPa		

INSTALLATION INSTRUCTIONS

This flow kit is designed to allow you to convert your Assault nozzle to a different flow rate. The conversion instructions must be followed in order to assure the Assault achieves the flow indicated on the baffle.

IMPORTANT—Each nozzle has a color coded metal flow spacer under the baffle head, and may have a plastic adjustment shim. The plastic adjustment shim must be used with the conversion baffle.

1. Remove the screw that secures the baffle head. Caution: Be careful not to lose flow spacer and adjustment shim.
2. Remove the baffle head, flow spacer and adjustment shim.
3. Remove the plastic thread cap from the new baffle screw.
4. Take the plastic adjustment shim from the original baffle assembly and place it between the new baffle head and the new flow spacer.
5. Install the new baffle assembly onto your Assault nozzle. Be sure the screw is securely hand tightened.
6. Flow test the nozzle to be sure it is operating properly.

**If any problems are encountered or questions arise, contact
Akron Brass Customer Service at (800) 228-1161.**

***Note: Style 4822 kits fit 4822, 4823, 4824, 4825 and 4826. Style 4827 kit fits 4827 and 4837.**



PHONE: 330.264.5678 or 800.228.1161 | FAX: 330.264.2944 or 800.531.7335 | akronbrass.com

REVISED: 6/11

WARRANTY AND DISCLAIMER: We warrant Akron Brass products for a period of five (5) years after purchase against defects in materials or workmanship. Akron Brass will repair or replace product which fails to satisfy this warranty. Repair or replacement shall be at the discretion of Akron Brass. Products must be promptly returned to Akron Brass for warranty service.

We will not be responsible for: wear and tear; any improper installation, use, maintenance or storage; negligence of the owner or user; repair or modification after delivery; damage; failure to follow our instructions or recommendations; or anything else beyond our control. WE MAKE NO WARRANTIES, EXPRESS OR IMPLIED, OTHER THAN THOSE INCLUDED IN THIS WARRANTY STATEMENT, AND WE DISCLAIM ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Further, we will not be responsible for any consequential, incidental or indirect damages (including, but not limited to, any loss of profits) from any cause whatsoever. No person has authority to change this warranty.

© Akron Brass Company. 2011 All rights reserved. No portion of this can be reproduced without the express written consent of Akron Brass Company.