



STYLE ELRE REVEL SCOUT™ LED SCENELIGHT BATTERY BRACKET REPLACEMENT INSTRUCTIONS

The following is intended to provide the basic instructions for the replacement of the Battery Bracket for the Revel Scout LED Scene Light. **IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY, NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY, AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE OR PERSONAL INJURY, AND WILL INVALIDATE THE WARRANTY!**


⚠ WARNING Read and follow the replacement instructions. Failure to do so could cause a short circuit and possible fire. Product damage may also occur.

Replacement Procedure

Refer to the Parts List for the diagram of the product and balloon cross references.

- 1) Remove the Battery Pack
- 2) Remove the four Screws (#40)
- 3) Carefully remove the Battery Bracket (#43) from the Contacts

NOTE: Older units may have washers installed between the battery bracket and light head. If so, remove those washers from the light head and do not re-use.

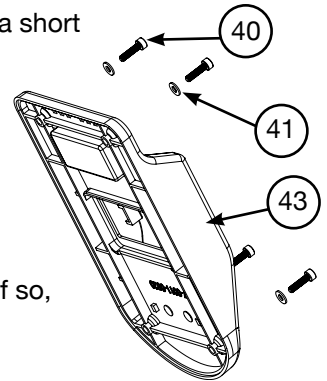

⚠ WARNING Loose hardware in the scenelight poses a short circuit hazard and must be avoided.

- 5) Reinstall the Contacts into the Battery Bracket. Ensure the “Battery Contact Gasket” is positioned between the Contacts and Body as shown on the Parts List.

⚠ WARNING Failure to install the Battery Contact Gasket will cause a short circuit hazard and possible fire. Product damage may also occur.

- 6) Position a Washer (#41) on each Screw.
- 7) Apply thread locker to the screws, insert into the Battery Bracket and reinstall the Battery Bracket to the Body.
DO NOT OVER TIGHTEN SCREWS. TIGHTEN ONLY UNTIL SNUG.
- 8) Reinstall the Battery Pack.



PHONE: 330.264.5678 or 800.228.1161 | FAX: 330.264.2944 or 800.531.7335 | akronbrass.com

REVISED: 06/18

WARRANTY AND DISCLAIMER: We warrant Akron Brass products for a period of five (5) years after purchase against defects in materials or workmanship. Akron Brass will repair or replace product which fails to satisfy this warranty. Repair or replacement shall be at the discretion of Akron Brass. Products must be promptly returned to Akron Brass for warranty service.

We will not be responsible for: wear and tear; any improper installation, use, maintenance or storage; negligence of the owner or user; repair or modification after delivery; damage; failure to follow our instructions or recommendations; or anything else beyond our control. WE MAKE NO WARRANTIES, EXPRESS OR IMPLIED, OTHER THAN THOSE INCLUDED IN THIS WARRANTY STATEMENT, AND WE DISCLAIM ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Further, we will not be responsible for any consequential, incidental or indirect damages (including, but not limited to, any loss of profits) from any cause whatsoever. No person has authority to change this warranty.

© Akron Brass Company. 2018 All rights reserved. No portion of this can be reproduced without the express written consent of Akron Brass Company.