



JOYSTICK OPTION FOR CUSTOMER SUPPLIED VALVE INSTALLATION AND OPERATING INSTRUCTIONS

The following is intended to provide the basic instructions for installation, operation and maintenance of the Joystick option for Customer Supplied Valve.

The joystick is unsealed and therefore intended for use in enclosed areas where water cannot penetrate the enclosure.

Read these operating instructions and the instructions for the appropriate monitor before operating or installing your unit.

PRODUCT WARNINGS:

⚠ WARNING: Keep water out of the joystick control box. Exposure to water will cause damage to the unit.


⚠ WARNING: Do not use the joystick control when the override cranks are being used or are in position for use.

GENERAL INSTRUCTIONS


Review the instructions and wiring diagram before installing.

Follow these wiring diagram instructions to install this joystick controller.

WIRING DIAGRAM

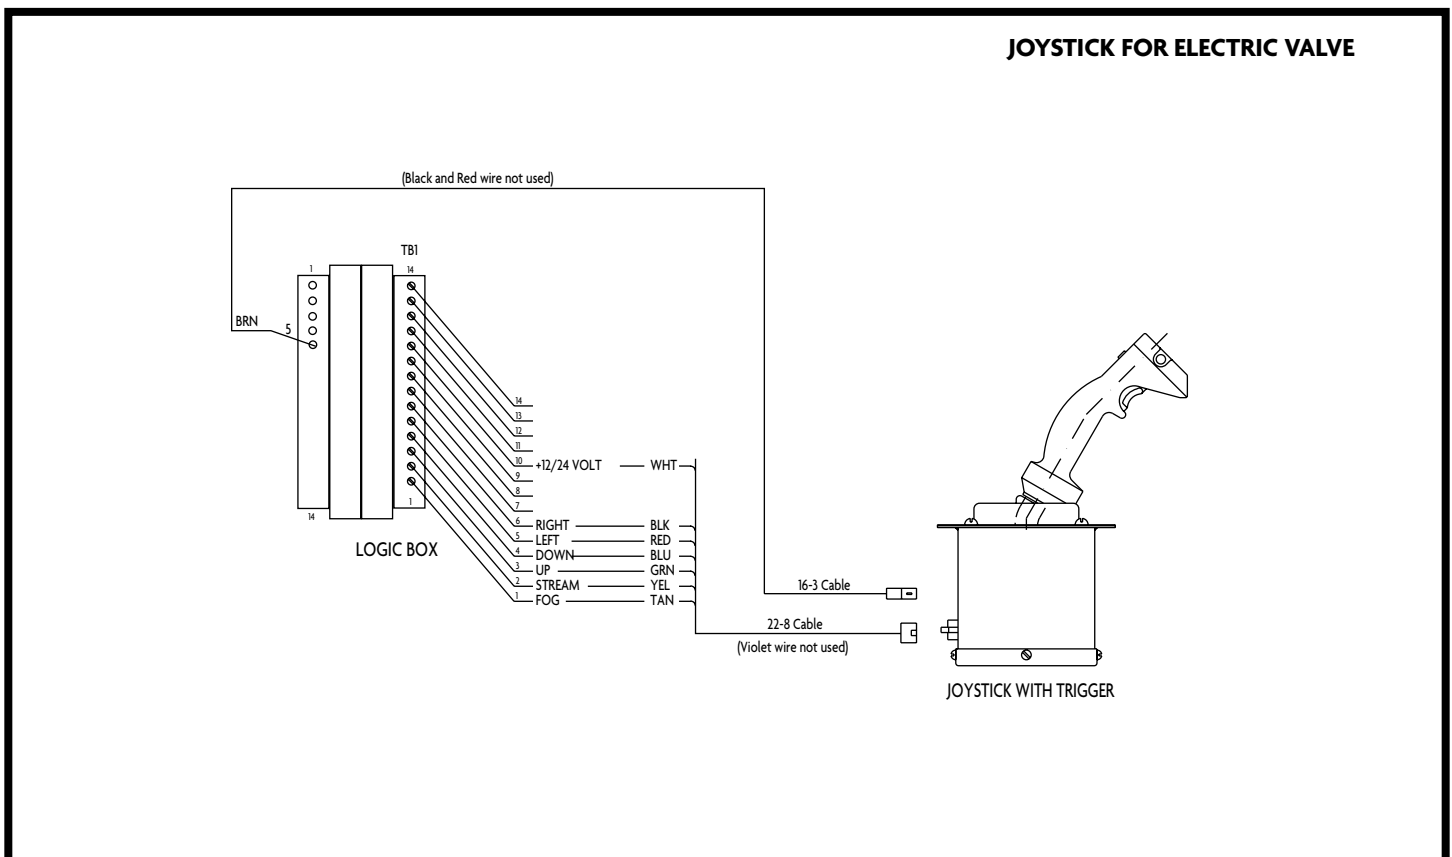

JOYSTICK FOR SOLENOID VALVE

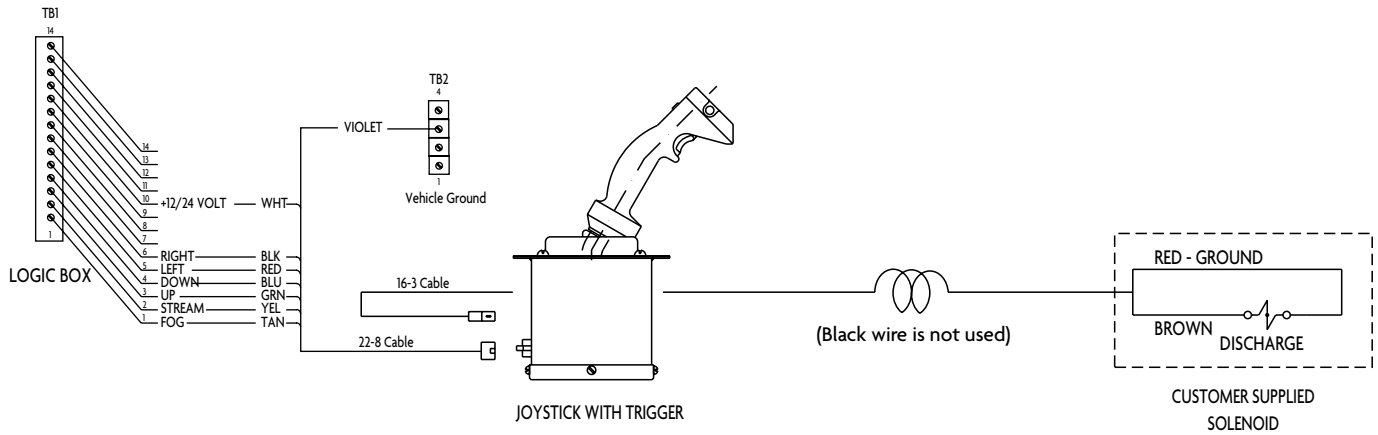

OPERATING INSTRUCTIONS

The joystick controller is used to control the monitor and the nozzle. To change the nozzle pattern press the toggle switch in the appropriate direction. To change the horizontal position of the monitor, move the joystick right or left until the desired position is achieved. To change the vertical position of the monitor, move the joystick forward or back until the desired elevation is achieved.