

USB Transceiver Setup

Installing the USB Transceiver Drivers.

If you have the CD that came with your USB Diagnostics kit, the drivers are on the CD. If you do not have your CD, you may download the drivers from Weldon's website. Go to www.weldoninc.com and press the V-MUX Files tab. In the Driver Updates section, there is a file named *USBDrivers.zip* which you must download and unzip to a directory on your hard drive. Remember where you unzipped the drivers to, because you will need this information at a later point.


At this point, connect your USB Transceiver to the computer. Windows should detect the new hardware attached and start the *Found New Hardware Wizard* automatically.



Select *No, not this time* and press the *Next* Button.



Select *Install from a list or specific location (Advanced)*, and press the *Next* Button.

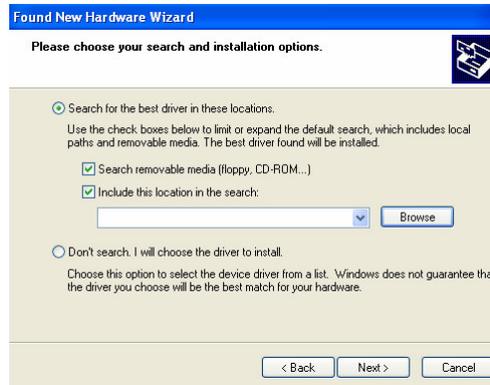

Ensure that *Include this location in the search:* is selected, and if you have the CD that came with the USB Diagnostics kit, you should also have *Search removable media (floppy, CD-ROM...)* selected and the CD should be in the drive.

If you downloaded the drivers from our website and have unzipped them to a directory on your hard drive, press the **Browse** button and select the directory that you unzipped the drivers to.

Once you have selected the correct directory, press the *Next* Button to continue.

If the wizard is able to find the drivers, you should see Windows installing the drivers.

Once the wizard has installed the drivers, you should see the following dialog box.




At this point, you are half way done.

Windows should detect another new hardware device. You will follow the same steps above to install the second device.



Select *No, not this time* and press the *Next* Button.

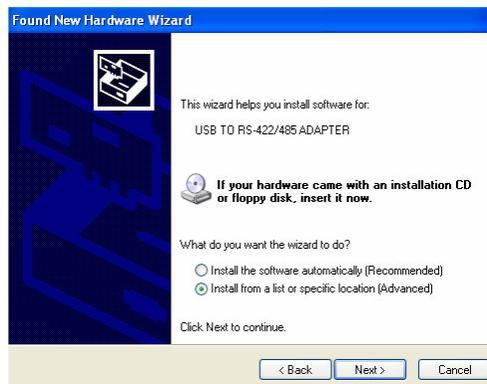

Select *Install from a list or specific location (Advanced)*, and press the *Next* Button.



Ensure that *Include this location in the search:* is selected, and if you have the CD that came with the USB Diagnostics kit, you should also have *Search removable media (floppy, CD-ROM...)* selected.

If you downloaded the drivers from our website and have unzipped them to a directory on your hard drive, the directory you used on the first device should still be displayed, if it is not, press the *Browse* button and select the directory that you unzipped the drivers to.

Once you have selected the correct directory, press the *Next* Button to continue.

If the wizard is able to find the drivers, you should see Windows installing the drivers.

Once the wizard has installed the drivers, you should see the following dialog box.



At this point, you have installed the drivers, and you should now be able to use your V-MUX Diagnostics or V-MUX Downloader software with your USB Transceiver.

****Note****

In order for the V-MUX Diagnostics and V-MUX Downloader software to correctly utilize the USB Transceiver, the transceiver must be connected to the computer prior to starting the software.

****Note****