

IDEX CORPORATION

ISO 9001 CERTIFIED

607 NW 27th Ave Ocala, FL 34475 Phone: (352) 629-5020 or 800-533-3569 Fax: (352)-629-2902

OPERATION MANUAL

ES-Key
16 Output module (selectable polarity)
P/N 610-00031



FOR EXTERNAL DISTRIBUTION OPERATION MANUAL

P/N

FSG-MNL-00109

 DATE
 8/15/2017

 REV
 1.02

 BY
 GMC

PAGE

1 of 10

607 NW 27th Ave Ocala, FL 34475 Phone: (352) 629-5020 Fax: (352)-629-2902

PRODUCT 16 output module

ES-Key

PRODUCT GROUP

| 1. | RE | EVISION LOG | . 1 |
|----|--------------------------------------|---|-------------------|
| 2. | M | ODULE OVERVIEW | . 2 |
| | 2.1. 2.2. 2.3. | SCOPEPART NUMBERSSETUP | . 2 |
| | _ | S-KEY OPERATION | |
| | 3.2. <i>3.2.1</i> | SELECTABLE POLARITY OUTPUTS 1. Output polarity selection MODULE TYPE AND ADDRESS 1. Address selection OUTPUT MEMORY SPACE | . 3 . 4 . 4 |
| 4. | CC | ONNECTOR DESCRIPTION | . 6 |
| | 4.1. 4.2. <i>4.2.1</i> 4.3. | 1. Terminating resistor requirement (CAN communication) | . 6 . 7 |
| 5. | M | OUNTING | . 8 |
| 6. | DI | AGNOSTICS | . 9 |
| 7. | GL | LOSSARY | 10 |
| 8. | TE | ECHNICAL DETAILS | 10 |
| | 8 1 | WEEE (WASTE OF ELECTRICAL AND ELECTRONIC FOLIPMENT) DIRECTIVE | 10 |

1. Revision Log

| Rev | Date | Approved | Changes |
|------|-----------|--|---|
| 1.00 | 9-05-2014 | GMC | Initial requirements |
| 1.01 | 9-21-2015 | MH | Corrected module description in section 6 |
| 1.02 | 8-15-2017 | 15-2017 AMS Corrected part number description text | |

| HALE | FOR EXTERNAL DISTRIBUTION | | | | | | | 2 of 10 |
|---|---------------------------|-------|------------------|-----|---------------|------|---|-----------|
| DEX COMPORATION | OPERATION MANUAL | | | | | DATI | E | 8/15/2017 |
| 607 NW 27th Ave | PRODUCT GR | OUP | ES-Key | P/N | FSG-MNL-00109 | REV | ' | 1.02 |
| Ocala, FL 34475 Phone : (352) 629-5020 Fax : (352)-629-2902 | PRODUCT | 16 οι | 16 output module | | | | | GMC |

2. Module Overview

2.1. Scope

The ES-KeyTM 16 output module is a Class 1 ES-Key network module designed for use in a ES-KeyTM electrical system network. This module has sixteen (16) configurable polarity outputs (positive or ground). The outputs are controlled from the ES-Key network via J1939 CAN messages and can be tied to desired functionality through the ES-Key database by using the ES-Key professional software.

2.2. Part numbers

Switch Output Module Hale – p/n 610-00031

2.3. Setup

When the module leaves the factory it is configured with the following default configurations.

| Function | Mode | Position |
|----------|------|----------|----------|------|----------|----------|------|----------|----------|------|----------|
| OUT 0 | POS | DOWN | OUT 4 | POS | DOWN | OUT 8 | POS | DOWN | OUT 12 | POS | DOWN |
| OUT 1 | POS | DOWN | OUT 5 | POS | DOWN | OUT 9 | POS | DOWN | OUT 13 | POS | DOWN |
| OUT 2 | POS | DOWN | OUT 6 | POS | DOWN | OUT 10 | POS | DOWN | OUT 14 | POS | DOWN |
| OUT 3 | POS | DOWN | OUT 7 | POS | DOWN | OUT 11 | POS | DOWN | OUT 15 | POS | DOWN |

(Note: Selection switches are only read on power up).

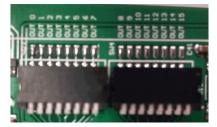


Figure 1. Output polarity selection switches.

| HALE | FOR EXTERNAL DISTRIBUTION | | | | | | | 3 of 10 |
|---|---------------------------|-------|--------------|-----|---------------|--|------|-----------|
| DEX CORPORATION | OPERATION MANUAL | | | | | | DATE | 8/15/2017 |
| 607 NW 27th Ave | PRODUCT GR | OUP | ES-Key | P/N | FSG-MNL-00109 | | REV | 1.02 |
| Ocala, FL 34475 Phone : (352) 629-5020 Fax : (352)-629-2902 | PRODUCT | 16 oı | utput module | | | | ву | GMC |

3. Es-Key Operation

3.1. Selectable polarity outputs

The module has 16 outputs that can be configured for either positive or ground output polarity (see section 3.1.1). These outputs are activated through associations within the ES-Key database and are designed to drive inductive, capacitive, or resistive loads (relays, solenoids, indicators, etc). These outputs are overload and short circuit protected. The maximum load tied to each output should be limited to 0.25 Amps (loads more than this may cause the output to shutdown due to thermal overload). The outputs will report an over current condition to the Es-key network and if any of the outputs are in an over current situation the COM LED on the module will be flashing at a fast rate to give the user an indication that one of the outputs is in over current condition. When an output goes into an over current situation the affected output will shut down and attempt to turn back on three times. If on the third try and the over current situation is still present the output will shut down until the output is physically shut off to reset it.

3.1.1. Output polarity selection

The polarity of each output is selected by setting the output polarity selection switches (located inside of the case) to the desired positions. The switches are labeled OUT 0 through OUT 15 and are directly related to the physical outputs. Each output can be placed in the POS (positive) or NEG (ground) position. When the switch is down it is in the positive position. When the switch is up it is in the negative position.

(Note: Selection switches are only read at power up).

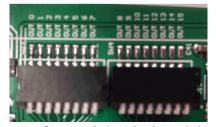


Figure 2. Output polarity selection switches.


| HALE' | | PAGE | 1 01 10 | | | | |
|---|--|-------|--------------|--|--|----|------|
| 607 NW 27th Ave | PRODUCT GROUP ES-Key P/N FSG-MNL-00109 | | | | | | 1.02 |
| Ocala, FL 34475 Phone : (352) 629-5020 Fax : (352)-629-2902 | PRODUCT | 16 oı | utput module | | | ВҮ | GMC |

3.2. Module type and address

The 16 output Module is recognized by the ES-Key Professional software as a *switch output* module (device type 3). The module address is selected by the address switch (see section 3.2.1).

3.2.1. Address selection

The address is selected by rotating the address switch to the desired value (0-15). Use an address selection tool (or a #1 Philips screwdriver) to set the position of the switch to the desired address.

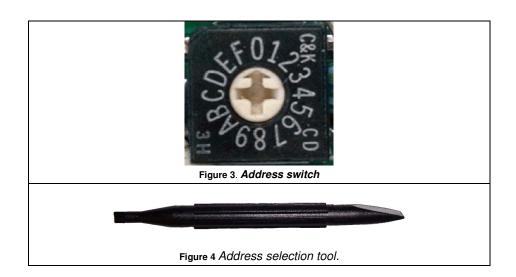

FORM-ENG-0018 REV A 05-27-03

| HALE' | | PAGE | 5 of 10 | | | | |
|---|------------------|-------|--------------|-----|---------------|-----|-----------|
| DEX CORPORATION | OPERATION MANUAL | | | | | | 8/15/2017 |
| 607 NW 27th Ave | PRODUCT GR | OUP | ES-Key | P/N | FSG-MNL-00109 | REV | 1.02 |
| Ocala, FL 34475 Phone : (352) 629-5020 Fax : (352)-629-2902 | PRODUCT | 16 οι | ıtput module | | | ВҮ | GMC |

3.3. Output memory space

The 16 Output Module uses standard ES-Key defined output memory space. The polarity selectable outputs are mapped into the output space.

| 0 | UTPUT MEMORY SPACE |
|--------|--------------------|
| Output | DESCRIPTION |
| 0 | Physical Output 0 |
| 1 | Physical Output 1 |
| 2 | Physical Output 2 |
| 3 | Physical Output 3 |
| 4 | Physical Output 4 |
| 5 | Physical Output 5 |
| 6 | Physical Output 6 |
| 7 | Physical Output 7 |
| 8 | Physical Output 8 |
| 9 | Physical Output 9 |
| 10 | Physical Output 10 |
| 11 | Physical Output 11 |
| 12 | Physical Output 12 |
| 13 | Physical Output 13 |
| 14 | Physical Output 14 |
| 15 | Physical Output 15 |




4. Connector Description

The module has two connectors and the following definitions apply:

4.1. Connector A (gray)

| Mating | Mating connector: Deutsch DTM06-12SA (GRAY) Mating sockets: 0462-201-20141 Wedge lock: WM12S Recommended wire gage: 18-24 AWG | | | | | | | | |
|--------|---|---|--|--|--|--|--|--|--|
| PIN | CIRCUIT | DESCRIPTION | | | | | | | |
| 1 | Supply + | Module supply (+9VDC+32VDC) [fused 750mA] | | | | | | | |
| 2 | CAN High | ES-Key CAN, SAE J1939 Proprietary, 250 kbits/S | | | | | | | |
| 3 | CAN Shield | ES-Key CAN, SAE J1939 Proprietary, 250 kbits/S | | | | | | | |
| 4 | | | | | | | | | |
| 5 | Output 12 | Digital Output (polarity selectable – positive or ground) | | | | | | | |
| 6 | Output 14 | Digital Output (polarity selectable – positive or ground) | | | | | | | |
| 7 | Output 15 | Digital Output (polarity selectable – positive or ground) | | | | | | | |
| 8 | Output 13 | Digital Output (polarity selectable – positive or ground) | | | | | | | |
| 9 | | | | | | | | | |
| 10 | | | | | | | | | |
| 11 | CAN Low | ES-Key CAN, SAE J1939 Proprietary, 250 kbits/S | | | | | | | |
| 12 | Supply - | Module supply (vehicle ground) | | | | | | | |

4.2. Connector B (black)

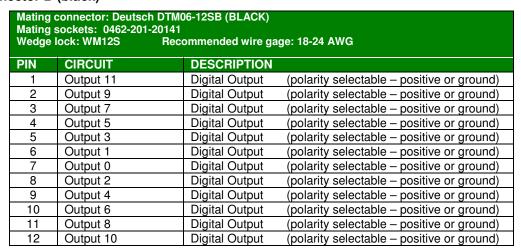

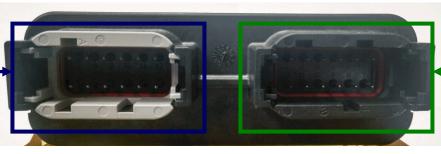


Figure 5. Connector identification.


| HALE | FOR EXTERNAL DISTRIBUTION | | | | | | 7 of 10 |
|---|---------------------------|-------|--------------|-----|---------------|------|-----------|
| ODEX CORPORATION | OPERATION MANUAL | | | | | DATE | 8/15/2017 |
| 607 NW 27th Ave | PRODUCT GR | OUP | ES-Key | P/N | FSG-MNL-00109 | REV | 1.02 |
| Ocala, FL 34475 Phone : (352) 629-5020 Fax : (352)-629-2902 | PRODUCT | 16 oı | utput module | | | ВҮ | GMC |

4.2.1. <u>Terminating resistor requirement (CAN communication)</u>

Two terminating resistors (120 Ohm) are required on the CAN bus for proper operation (one at each end of the CAN bus). Only two terminating resistors are allowed on a CAN bus.

Terminating resistor p/n DT06-3S-P006

CAN 3-way "Y" connector p/n DT04-3P-P007

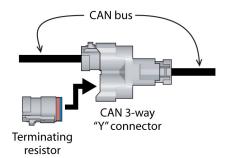


4.3. System compatibility

The 16 Output Module is compatible with other Class 1 CAN devices.




5. Mounting

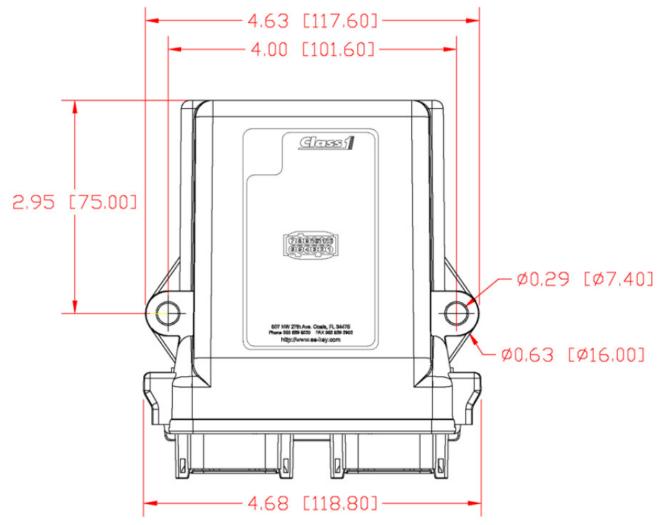

Mounting and package dimensions - inches [millimeters].

NOTE: When mounting the module vertically, make certain the connectors are pointed down so as to eliminate the possibility of standing water in the connector.

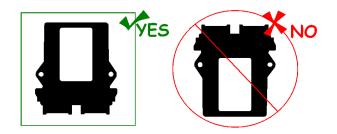



6. Diagnostics

The 16 output module has 3 diagnostic LEDs which are viewable through the top of its amber enclosure.

PWR - +5VDC logic power

BUS - +9...+32VDC Module power COM - Module status indicator

The COM LED indicates the module's CAN communication status.

On Solid

Module on-line

Flashing slow (2Hz)

CAN bus okay, but the module is not receiving messages from the Universal System Manager (USM).

Flashing fast (8Hz)


CAN bus error, no communications or not connected.

Flashing fast (20Hz)

Output Over Current Indication

Double flash

CAN bus has an ACTIVE error, no communications.

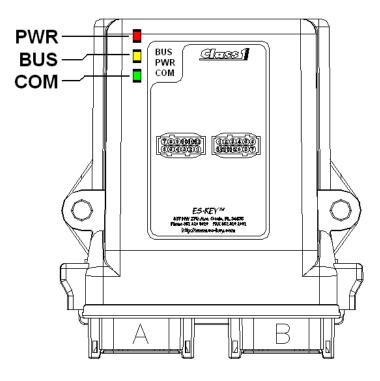



7. Glossary

LED <u>Light Emitting Diode</u>. The lights on the display used to show tank level and information.

CAN Controller Area Network. SAE J1939 communication method.

ELEPROM Electrically Erasable Programmable Read-Only Memory. The memory of the tank level display,

used to store the display information (tank level points, display type, dim value, etc).

OEM Original Equipment Manufacturer.

SAE Society of Automotive Engineers.

ESD ElectroStatic Discharge.

IP <u>Ingress Protection</u> (IP 67, etc).

p/n part number

8. Technical details

| ES-KEY |
|--|
| +9VDC+32VDC |
| Logic supply+ input (pin 1) |
| 62mA (1) |
| 83mA ⁽¹⁾ |
| 25mA per output |
| -40°C+85°C |
| IP 67 |
| SAE J1939 proprietary, 250 Kbits/second |
| Internal thermal fuse (750mA on pin 1) |
| Reverse voltage protection (pins 1 and 12) |
| CAN buses protected to 24V |
| ESD voltage protected to SAE J1113 specification for heavy duty trucks (24V) |
| Transient voltage protected to SAE J1113 specification for heavy duty trucks (24V) |
| Load dump voltage protected to SAE J1113 specification for heavy duty trucks (24V) |
| Outputs protected for short circuit and thermal overload |
| 4.680 [118.80] x 5.240 [133.10] x 1.420 [36.07] |
| |

⁽¹⁾ Does not include current draw due to connected external loads on outputs 0, 1, and 2.

8.1. WEEE (Waste of Electrical and Electronic Equipment) directive



This symbol [crossed-out wheeled bin WEEE Annex IV] indicates separate collection of waste electrical and electronic equipment in the European Union countries.

Please do not throw the equipment into the domestic refuse.

Each individual European Union member state has implemented the WEEE regulations into national law in slightly different ways. Please follow your national law when you want to dispose of any electrical or electronic products.

More details can be obtained from your national WEEE recycling agency.